



CAPABILITIES

INSTRUMENT CAPABILITIES

<u>PART NUMBER</u>		<u>CAPABILITY</u>	<u>MODEL</u>
5361-1-	/-3/-5/-7/-8/-9	Repair/Certify	ACP-5361
622-4401-001	/-003 /-004	Repair/Certify	ADC-81A
622-5812-00X		Repair/Certify	FDU-70
622-6135-001	thru -005	Repair/Certify	CCU-65
622-6135-011	thru -015	Repair/Certify	CCU-65
622-6174-001		Repair/Certify	RCP-65
622-6189-001	/-002	Repair/Certify	ICU-85
622-6190-113		Repair/Certify	AHC-85
622-6190-204		Repair/Certify	AHC-85
622-6208-XXX		Repair/Certify	APP-85
622-6209-XXX		Repair/Certify	MSP-85
622-6475-005	/-007	Repair/Certify	ADC-82A
622-6475-010	/-014 /-015	Repair/Certify	ADC-82A
622-6475-020	/-026 /-027	Repair/Certify	ADC-82A
622-6520-XXX		Repair/Certify	CTL-22
622-6521-XXX		Repair/Certify	CTL-32
622-6522-XXX		Repair/Certify	CTL-62
622-6523-XXX		Repair/Certify	CTL-92
622-6563-XXX		Repair/Certify	MSP-85A
622-6900-007	/-027/-407	Repair/Certify	APP-85A
622-7208-001	/-002/-004/-006	Repair/Certify	ADC-850
622-7209-001	thru -005	Repair/Certify	RAC-870
622-7386-001	/-002	Repair/Certify	AHC-85D
622-7386-400		Repair/Certify	AHC-85D
622-7411-204		Repair/Certify	APP-85D
622-7737-XXX		Repair/Certify	ADM-850
622-8051-001	thru -005	Repair/Certify	ADC-85
622-8105-013		Repair/Certify	ADC-82L
622-8154-00X		Repair/Certify	FDU-70A
622-8329-001	/-003	Repair/Certify	ADC-82C
622-8329-646	/-647	Repair/Certify	ADC-82C
622-8330-XXX		Repair/Certify	MSP-850A
622-8692-XXX		Repair/Certify	ADM-85
622-9227-001	/-002	Repair/Certify	ARP-86
622-9237-001	thru -003	Repair/Certify	ADC-86
622-9282-XXX		Repair/Certify	ADM-86
622-9292-001	/-002	Repair/Certify	ARP-850
622-9336-001	thru -003	Repair/Certify	AHC-85E
622-9336-400		Repair/Certify	AHC-85E
622-9345-001	thru -006	Repair/Certify	EFD-871
622-9345-008	/-010	Repair/Certify	EFD-871
622-9345-021	thru -027	Repair/Certify	EFD-871
622-9345-029		Repair/Certify	EFD-871
622-9345-201	thru -204	Repair/Certify	EFD-871



CAPABILITIES

INSTRUMENT CAPABILITIES

<u>PART NUMBER</u>		<u>CAPABILITY</u>	<u>MODEL</u>
622-9346-001	/-011/-021	Repair/Certify	RTU-870A
622-9346-002	/-012/-022/-032	Repair/Certify	RTU-870A
622-9346-003	/-013/-023/-033	Repair/Certify	RTU-870A
622-9434-001	thru -006	Repair/Certify	MFD-871
622-9434-008	/-011/-012	Repair/Certify	MFD-871
622-9434-020	thru -024	Repair/Certify	MFD-871
622-9434-026		Repair/Certify	MFD-871
622-9434-031	thru -035	Repair/Certify	MFD-871
622-9434-037	/-039	Repair/Certify	MFD-871
622-9434-202	/-204	Repair/Certify	MFD-871
622-9434-211	/-213	Repair/Certify	MFD-871
622-9500-001	/-101/-201	Repair/Certify	ARP-851
622-9500-002	/-102	Repair/Certify	ARP-851
622-9500-011	/-111	Repair/Certify	ARP-851
622-9500-012	/-112	Repair/Certify	ARP-851
622-9810-001	thru -008	Repair/Certify	EFD-4076
622-9810-010	/-012	Repair/Certify	EFD-4076
622-9810-016	/-018 /-030	Repair/Certify	EFD-4076
622-9810-202	/-204	Repair/Certify	EFD-4076
622-9810-300	/-302 /-304	Repair/Certify	EFD-4076
622-9810-306	/-308	Repair/Certify	EFD-4076
622-9812-001	thru -004	Repair/Certify	DCP-4000
622-9812-006	/-008 /-010 /-012	Repair/Certify	DCP-4000
622-9812-101	/-102 /-104 /-106	Repair/Certify	DCP-4000
622-9812-201	/-202 /-204 /-206	Repair/Certify	DCP-4000
622-9813-001	/-002	Repair/Certify	ICC-4000
622-9819-003	/-103	Repair/Certify	ARP-4000
622-9819-004	/-104	Repair/Certify	ARP-4000
622-9819-005	/-105	Repair/Certify	ARP-4000
622-9819-006	/-106	Repair/Certify	ARP-4000
622-9821-001	thru -004	Repair/Certify	ECP-4000
622-9822-001		Repair/Certify	LDU-4000
622-9851-XXX		Repair/Certify	CTL-23
622-9852-006	/-106	Repair/Certify	RTU-4000
622-9852-022	/-122	Repair/Certify	RTU-4000
622-9852-108	/-208	Repair/Certify	RTU-4000
622-9852-124	/-224	Repair/Certify	RTU-4000
622-9856-001	/-002/-005/-006	Repair/Certify	RTU-870T
622-9856-101	/-102/-111/-112	Repair/Certify	RTU-870T
622-9856-121	/-122/-131/-132	Repair/Certify	RTU-870T
622-9856-141	/-142/-151/-152	Repair/Certify	RTU-870T
622-9870-001	thru -004	Repair/Certify	MFD-871T
622-9870-015	thru -022	Repair/Certify	MFD-871T
622-9929-001	/-002/-502	Repair/Certify	WXP-4120



CAPABILITIES

INSTRUMENT CAPABILITIES

<u>PART NUMBER</u>	<u>CAPABILITY</u>	<u>MODEL</u>	
622-9932-001	/-002/-502	Repair/Certify	WXP-4220
622-9945-001	/-003	Repair/Certify	PWR-4000
622-9945-020	/-021/-022	Repair/Certify	PWR-4000
622-9978-002	/-020/-022	Repair/Certify	EFD-4077
622-9978-024	/-026/-028	Repair/Certify	EFD-4077
622-9978-102	/-108/-110/-112	Repair/Certify	EFD-4077
622-9978-114	/-116/-118	Repair/Certify	EFD-4077
622-9978-120	/-122	Repair/Certify	EFD-4077
622-9978-124	/-126/-128/-130	Repair/Certify	EFD-4077
622-9978-302	/-304/-306/-308	Repair/Certify	EFD-4077
622-9978-310	/-312/-314	Repair/Certify	EFD-4077
622-9978-402	/-404/-406	Repair/Certify	EFD-4077
622-9978-408	/-410	Repair/Certify	EFD-4077
622-9983-001	/-002	Repair/Certify	ARP-4001
622-9987-001	thru -004	Repair/Certify	DCP-4001
622-9987-006	/-102	Repair/Certify	DCP-4001
622-9989-001	/-002	Repair/Certify	ECP-4001
622-9992-002	/-004	Repair/Certify	FCP-4001
622-9995-001	/-101	Repair/Certify	ICC-4001
822-0002-006	/-008/-020	Repair/Certify	RTU-4010
822-0002-108	/-110	Repair/Certify	RTU-4010
822-0002-120	/-122	Repair/Certify	RTU-4010
822-0002-210	/-222	Repair/Certify	RTU-4010
822-0021-002	/-102/-202	Repair/Certify	CDU-4100
822-0021-104	/-204	Repair/Certify	CDU-4100
822-0039-402		Repair/Certify	UMT-16D Mount
822-0044-001	thru -003	Repair/Certify	FCP-4002
822-0180-001	/-002	Repair/Certify	ECP-4003
822-0182-001	/-101	Repair/Certify	FCP-4003
822-0198-001	/-002	Repair/Certify	ICC-4004
822-0201-001	/-002	Repair/Certify	ICC-4005
822-0288-001	/-002	Repair/Certify	IEC-4000
822-0321-001	thru -004	Repair/Certify	DCP-4002
822-0321-006	/-008	Repair/Certify	DCP-4002
822-0326-001	/-002/-102	Repair/Certify	ARP-4002
822-0333-001		Repair/Certify	IEC-4001
822-0370-113	/-123	Repair/Certify	ADC-85A
822-0370-146	/-147	Repair/Certify	ADC-85A
822-0370-461	/-462	Repair/Certify	ADC-85A
822-0371-159	/-359/-659	Repair/Certify	ADC-86A
822-0371-164	/-165	Repair/Certify	ADC-86A
822-0371-168	/-368	Repair/Certify	ADC-86A
822-0371-403	/-414	Repair/Certify	ADC-86A
822-0371-405		Repair/Certify	ADC-86A



CAPABILITIES

INSTRUMENT CAPABILITIES

<u>PART NUMBER</u>	<u>CAPABILITY</u>	<u>MODEL</u>
822-0371-483	Repair/Certify	ADC-86A
822-0372-XXX	Repair/Certify	ADC-850A
822-0373-104	Repair/Certify	ADC-850B
822-0374-XXX	Repair/Certify	ADC-850C
822-0385-001	Repair/Certify	ADC-850D
822-0389-XXX	Repair/Certify	FCP-4004
822-0450-001	Repair/Certify	ADC-850D
822-0781-001	Repair/Certify	ICC-4006
822-0842-XXX	Repair/Certify	ICC-4007
822-0867-001	Repair/Certify	ADC-850E
822-1029-001	Repair/Certify	CDU-6000
822-1036-XXX	Repair/Certify	ICC-4008
822-1058-002	Repair/Certify	ADC-850F
822-1107-012	Repair/Certify	CCP-4000
822-1107-103	Repair/Certify	FGP-3000
822-1107-106	Repair/Certify	FGP-3000
822-1120-XXX	Repair/Certify	FGP-3000
822-1121-XXX	Repair/Certify	CTL-22C
822-1122-111	Repair/Certify	CTL-23C
822-1123-101	Repair/Certify	RTU-870B
822-1131-001	Repair/Certify	RTU-870C
822-1134-002	Repair/Certify	IEC-3000
822-1134-041	Repair/Certify	DCP-3000
822-1134-102	Repair/Certify	DCP-3000
822-1137-001	Repair/Certify	DCP-3000
822-1167-001	Repair/Certify	PWR-3000
822-1193-001	Repair/Certify	IEC-3001
822-1407-001	Repair/Certify	FDU-3000
822-1476-002	Repair/Certify	ICC-4009
822-1825-101	Repair/Certify	ICC-4009
822-1828-XXX	Repair/Certify	DCP-3020
GMT4190-011	Repair/Certify	DCP-3020
	Repair/Certify	RTU-870F
	Repair/Certify	DCP-3030
	Repair/Certify	Clock



CAPABILITIES

RADIO CAPABILITIES

<u>PART NUMBER</u>		<u>CAPABILITY</u>	<u>MODEL</u>
622-2855-001	/-011	Repair/Certify	ALT-55B
622-2855-002	/-012	Repair/Certify	ALT-55B
622-6137-001	/-201	Repair/Certify	VIR-32
622-6152-001	/-011/-021/-031	Repair/Certify	VHF-22A
622-6152-002	/-012/-022/-032	Repair/Certify	VHF-22A
622-6152-023	/-033	Repair/Certify	VHF-22A
622-6153-001	/-021	Repair/Certify	VHF-22B
622-6153-002	/-022	Repair/Certify	VHF-22B
622-6153-023		Repair/Certify	VHF-22B
622-7194-001	/-101/-201	Repair/Certify	VIR-432
622-7194-011		Repair/Certify	VIR-432
622-7292-001	/-101/-121	Repair/Certify	VHF-422A
622-7292-002	/-102/-122	Repair/Certify	VHF-422A
622-7292-123		Repair/Certify	VHF-422A
622-7293-001	/-101/-121	Repair/Certify	VHF-422B
622-7293-002	/-102/-122	Repair/Certify	VHF-422B
622-7293-123		Repair/Certify	VHF-422B
622-8439-001	/-002/-011	Repair/Certify	RTA-852
622-8439-003	/-203	Repair/Certify	RTA-852
622-8439-004	/-204	Repair/Certify	RTA-852
622-8440-001	/-002/-011	Repair/Certify	RTA-854
622-8440-003	/-203	Repair/Certify	RTA-854
622-8440-004	/-204	Repair/Certify	RTA-854
622-8441-001	/-002/-011	Repair/Certify	RTA-858
622-8441-003	/-203	Repair/Certify	RTA-858
622-8441-004	/-204	Repair/Certify	RTA-858
622-9080-001	/-002/-011	Repair/Certify	RTA-852L
622-9080-003	/-203	Repair/Certify	RTA-852L
622-9080-004		Repair/Certify	RTA-852L
622-9080-005	/-205	Repair/Certify	RTA-852L
622-9080-006	/-206	Repair/Certify	RTA-852L
622-9301-001	/-002/-011	Repair/Certify	RTA-842
622-9301-003	/-203	Repair/Certify	RTA-842
622-9301-004	/-204	Repair/Certify	RTA-842
622-9302-001	/-002/-011	Repair/Certify	RTA-844
622-9302-003	/-203	Repair/Certify	RTA-844
622-9302-004	/-204	Repair/Certify	RTA-844
622-9303-001	/-002/-011	Repair/Certify	RTA-848
622-9303-003	/-203	Repair/Certify	RTA-848
622-9303-004	/-204	Repair/Certify	RTA-848



CAPABILITIES

RADIO CAPABILITIES

<u>PART NUMBER</u>		<u>CAPABILITY</u>	<u>MODEL</u>
822-0393-001		Repair/Certify	VIR-433
822-0400-001		Repair/Certify	VIR-33
822-1050-004		Repair/Certify	RTA-800
822-1113-001	/-021/-023	Repair/Certify	VHF-22C
822-1114-001	/-021/-023	Repair/Certify	VHF-22D
822-1115-001	/-021	Repair/Certify	VHF-422C
822-1116-001	/-021/-023	Repair/Certify	VHF-422D



CAPABILITIES

ACCESSORY CAPABILITIES

<u>PART NUMBER</u>	<u>CAPABILITY</u>	<u>MODEL</u>
200-94976-101	Repair/Certify	510708
601R51086-27	Repair/Certify	51086
601R51140-1	Repair/Certify	51140
601R51162-27	Repair/Certify	51162
601R51203-33	Repair/Certify	51203
601R51204-9	Repair/Certify	51204
601R51226-23	Repair/Certify	51226
601R51518-5	Repair/Certify	51518
601R51594-1	Repair/Certify	51594
601R51706-3	Repair/Certify	51706
601R51313-X	Repair/Certify	51313
622-9968-001	Repair/Certify	SVL-4000
628-5239-001	Repair/Certify	HVPS, 15kV
653-1597-001	Repair/Certify	C82933-M1
653-3853-002	Repair/Certify	PK266-01A
827-1170-001	Repair/Certify	HVPS, 18kV
827-1737-001	Repair/Certify	HVPS, 15kV
827-3694-001	Repair/Certify	CRT, 12A85
827-4032-001	Repair/Certify	HVPS, 22kV
827-6410-001	Repair/Certify	Front End, ADC
634-4069-001	Repair/Certify	HVPS, 15kV
836-7086-002	Repair/Certify	Keyboard, CDU
CC670-51052	Repair/Certify	51052