



## CAPABILITIES

### INSTRUMENT CAPABILITIES

<u>PART NUMBER</u>		<u>CAPABILITY</u>	<u>MODEL</u>
5361-1-	/-3/-5/-7/-8/-9	Repair/Certify	ACP-5361
622-4401-001	/-003 /-004	Repair/Certify	ADC-81A
622-5812-00X		Repair/Certify	FDU-70
622-6135-001	thru -005	Repair/Certify	CCU-65
622-6135-011	thru -015	Repair/Certify	CCU-65
622-6174-001		Repair/Certify	RCP-65
622-6189-001	/-002	Repair/Certify	ICU-85
622-6190-113	/-204 /-400	Repair/Certify	AHC-85
622-6208-XXX		Repair/Certify	APP-85
622-6209-XXX		Repair/Certify	MSP-85
622-6475-005	/-007 /-010 /-014 /-015	Repair/Certify	ADC-82A
622-6475-020	/-026 /-027	Repair/Certify	ADC-82A
622-6520-XXX		Repair/Certify	CTL-22
622-6521-XXX		Repair/Certify	CTL-32
622-6522-XXX		Repair/Certify	CTL-62
622-6523-XXX		Repair/Certify	CTL-92
622-6563-XXX		Repair/Certify	MSP-85A
622-6900-007	/-027 /-407	Repair/Certify	APP-85A
622-7208-001	/-002 /-004 /-006	Repair/Certify	ADC-850
622-7209-001	thru -005	Repair/Certify	RAC-870
622-7386-001	/-002 /-400	Repair/Certify	AHC-85D
622-7411-204		Repair/Certify	APP-85D
622-7484-XXX		Repair/Certify	DU-1000
622-7737-XXX		Repair/Certify	ADM-850
622-8047-XXX		Repair/Certify	DU-1000A
622-8051-001	thru -005	Repair/Certify	ADC-85
622-8105-013	/-113	Repair/Certify	ADC-82L
622-8154-00X		Repair/Certify	FDU-70A
622-8329-001	/-003 /-646 /-647	Repair/Certify	ADC-82C
622-8330-XXX		Repair/Certify	MSP-850A
622-8692-XXX		Repair/Certify	ADM-85
622-9227-001	/-002	Repair/Certify	ARP-86
622-9237-001	thru -003	Repair/Certify	ADC-86
622-9282-XXX		Repair/Certify	ADM-86
622-9292-001	/-002	Repair/Certify	ARP-850
622-9336-001	/-002 /-003 /-400	Repair/Certify	AHC-85E
622-9345-001	thru -006	Repair/Certify	EFD-871
622-9345-008	/-010	Repair/Certify	EFD-871
622-9345-021	thru -027 /-029	Repair/Certify	EFD-871
622-9345-201	thru -204	Repair/Certify	EFD-871
622-9346-001	/-011 /-021	Repair/Certify	RTU-870A
622-9346-002	/-012 /-022 /-032	Repair/Certify	RTU-870A
622-9346-003	/-013 /-023 /-033	Repair/Certify	RTU-870A
622-9434-001	thru -006	Repair/Certify	MFD-871



## CAPABILITIES

### INSTRUMENT CAPABILITIES

<u>PART NUMBER</u>		<u>CAPABILITY</u>	<u>MODEL</u>
622-9434-008	/-011 /-012	Repair/Certify	MFD-871
622-9434-020	thru -024 /-026	Repair/Certify	MFD-871
622-9434-031	thru -035	Repair/Certify	MFD-871
622-9434-037	/-039	Repair/Certify	MFD-871
622-9434-202	/-204 /-211 /-213	Repair/Certify	MFD-871
622-9500-001	/-002 /-011 /-012	Repair/Certify	ARP-851
622-9500-101	/-102 /-111 /-112 /-201	Repair/Certify	ARP-851
622-9810-001	thru -008	Repair/Certify	EFD-4076
622-9810-010	/-012 /-016 /-018	Repair/Certify	EFD-4076
622-9810-030	/-032	Repair/Certify	EFD-4076
622-9810-202	/-204 /-300	Repair/Certify	EFD-4076
622-9810-302	/-304 /-306 /-308	Repair/Certify	EFD-4076
622-9812-001	thru -004	Repair/Certify	DCP-4000
622-9812-006	/-008 /-010 /-012	Repair/Certify	DCP-4000
622-9812-101	/-102 /-104 /-106	Repair/Certify	DCP-4000
622-9812-201	/-202 /-204 /-206	Repair/Certify	DCP-4000
622-9813-001	/-002	Repair/Certify	ICC-4000
622-9819-003	/-004 /-005 /-006	Repair/Certify	ARP-4000
622-9819-103	/-104 /-105 /-106	Repair/Certify	ARP-4000
622-9821-001	thru -004	Repair/Certify	ECP-4000
622-9822-001		Repair/Certify	LDU-4000
622-9851-XXX		Repair/Certify	CTL-23
622-9852-006	/-022 /-106 /-122	Repair/Certify	RTU-4000
622-9852-108	/-124 /-208 /-224	Repair/Certify	RTU-4000
622-9856-001	/-002 /-005 /-006	Repair/Certify	RTU-870T
622-9856-101	/-102 /-111 /-112	Repair/Certify	RTU-870T
622-9856-121	/-122 /-131 /-132	Repair/Certify	RTU-870T
622-9856-141	/-142 /-151 /-152	Repair/Certify	RTU-870T
622-9870-001	thru -004	Repair/Certify	MFD-871T
622-9870-015	thru -022	Repair/Certify	MFD-871T
622-9929-001	/-002 /-502	Repair/Certify	WXP-4120
622-9932-001	/-002 /-502	Repair/Certify	WXP-4220
622-9945-001	/-003 /-020 /-021 /-022	Repair/Certify	PWR-4000
622-9978-002	/-020 /-022	Repair/Certify	EFD-4077
622-9978-024	/-026 /-028	Repair/Certify	EFD-4077
622-9978-102	/-108 /-110 /-112	Repair/Certify	EFD-4077
622-9978-114	/-116 /-118 /-120 /-122	Repair/Certify	EFD-4077
622-9978-124	/-126 /-128 /-130	Repair/Certify	EFD-4077
622-9978-302	/-304 /-306 /-308	Repair/Certify	EFD-4077
622-9978-310	/-312 /-314	Repair/Certify	EFD-4077
622-9978-402	/-404 /-406 /-408 /-410	Repair/Certify	EFD-4077
622-9983-001	/-002	Repair/Certify	ARP-4001
622-9987-001	thru -004	Repair/Certify	DCP-4001
622-9987-006	/-102	Repair/Certify	DCP-4001



## CAPABILITIES

### INSTRUMENT CAPABILITIES

<u>PART NUMBER</u>	<u>CAPABILITY</u>	<u>MODEL</u>	
622-9989-001	/-002	Repair/Certify	ECP-4001
622-9992-002	/-004	Repair/Certify	FCP-4001
622-9995-001	/-101	Repair/Certify	ICC-4001
822-0002-006	/-008/-020	Repair/Certify	RTU-4010
822-0002-108	/-110 /-120 /-122	Repair/Certify	RTU-4010
822-0002-210	/-222	Repair/Certify	RTU-4010
822-0021-002	/-102 /-202	Repair/Certify	CDU-4100
822-0021-104	/-204	Repair/Certify	CDU-4100
822-0039-402		Repair/Certify	UMT-16D Mount
822-0044-001	thru -003	Repair/Certify	FCP-4002
822-0180-001	/-002	Repair/Certify	ECP-4003
822-0182-001	/-101	Repair/Certify	FCP-4003
822-0198-001	/-002	Repair/Certify	ICC-4004
822-0201-001	/-002	Repair/Certify	ICC-4005
822-0288-001	/-002	Repair/Certify	IEC-4000
822-0321-001	thru -004	Repair/Certify	DCP-4002
822-0321-006	/-008	Repair/Certify	DCP-4002
822-0326-001	/-002/-102	Repair/Certify	ARP-4002
822-0333-001		Repair/Certify	IEC-4001
822-0370-XXX		Repair/Certify	ADC-85A
822-0371-159	/-359 /-659	Repair/Certify	ADC-86A
822-0371-164	/-165 /-168 /-368	Repair/Certify	ADC-86A
822-0371-403	/-405 /-414 /-483	Repair/Certify	ADC-86A
822-0372-XXX		Repair/Certify	ADC-850A
822-0373-104	/-520	Repair/Certify	ADC-850B
822-0374-XXX		Repair/Certify	ADC-850C
822-0385-001	/-002	Repair/Certify	FCP-4004
822-0389-XXX		Repair/Certify	ADC-850D
822-0450-001		Repair/Certify	ICC-4006
822-0781-001		Repair/Certify	ICC-4007
822-0842-XXX		Repair/Certify	ADC-850E
822-0867-001	thru -008	Repair/Certify	CDU-6000
822-1029-001	/-002	Repair/Certify	ICC-4008
822-1036-XXX		Repair/Certify	ADC-850F
822-1058-002		Repair/Certify	CCP-4000
822-1107-012	/-102 /-112	Repair/Certify	FGP-3000
822-1107-103	/-104 /-108 /-110	Repair/Certify	FGP-3000
822-1107-106	/-116 /-136	Repair/Certify	FGP-3000
822-1120-XXX		Repair/Certify	CTL-22C
822-1121-XXX		Repair/Certify	CTL-23C
822-1122-111	/-112	Repair/Certify	RTU-870B
822-1123-101	/-102 /-111 /-112	Repair/Certify	RTU-870C
822-1131-001		Repair/Certify	IEC-3000
822-1134-002	/-012 /-022 /-041 /-061	Repair/Certify	DCP-3000



## **CAPABILITIES**

### **INSTRUMENT CAPABILITIES**

<b><u>PART NUMBER</u></b>		<b><u>CAPABILITY</u></b>	<b><u>MODEL</u></b>
822-1134-102	/-112 /-122 /-202 /-302	Repair/Certify	DCP-3000
822-1137-001		Repair/Certify	PWR-3000
822-1167-001		Repair/Certify	IEC-3001
822-1193-001		Repair/Certify	FDU-3000
822-1407-001		Repair/Certify	ICC-4009
822-1476-002	/-012	Repair/Certify	DCP-3020
822-1724-455	/-458	Repair/Certify	ADC-85L
822-1807-001	thru -006	Repair/Certify	CTL-92E
822-1825-101	/-102 /-111 /-112	Repair/Certify	RTU-870F
822-1828-XXX		Repair/Certify	DCP-3030
GMT4190-011	/-012 /-020	Repair/Certify	Clock



## CAPABILITIES

### RADIO CAPABILITIES

<u>PART NUMBER</u>		<u>CAPABILITY</u>	<u>MODEL</u>
622-2855-001	/-002 /-011 /-012	Repair/Certify	ALT-55B
622-6137-001	/-201	Repair/Certify	VIR-32
622-6152-001	/-011 /-021 /-031	Repair/Certify	VHF-22A
622-6152-002	/-012 /-022 /-032	Repair/Certify	VHF-22A
622-6152-023	/-033	Repair/Certify	VHF-22A
622-6153-001	/-002 /-021 /-022 /-023	Repair/Certify	VHF-22B
622-7194-001	/-011 /-101 /-201	Repair/Certify	VIR-432
622-7292-001	/-101 /-121	Repair/Certify	VHF-422A
622-7292-002	/-102 /-122 /-123	Repair/Certify	VHF-422A
622-7293-001	/-101 /-121	Repair/Certify	VHF-422B
622-7293-002	/-102 /-122 /-123	Repair/Certify	VHF-422B
622-8439-001	/-002 /-003 /-011 /-203	Repair/Certify	RTA-852
622-8439-004	/-204	Repair/Certify	RTA-852
622-8440-001	/-002 /-003 /-011 /-203	Repair/Certify	RTA-854
622-8440-004	/-204	Repair/Certify	RTA-854
622-8441-001	/-002 /-003 /-011 /-203	Repair/Certify	RTA-858
622-8441-004	/-204	Repair/Certify	RTA-858
622-9080-001	/-002 /-003 /-011 /-203	Repair/Certify	RTA-852L
622-9080-004	/-005 /-006 /-205 /-206	Repair/Certify	RTA-852L
622-9301-001	/-002 /-003 /-011 /-203	Repair/Certify	RTA-842
622-9301-004	/-204	Repair/Certify	RTA-842
622-9302-001	/-002 /-003 /-011 /-203	Repair/Certify	RTA-844
622-9302-004	/-204	Repair/Certify	RTA-844
622-9303-001	/-002 /-003 /-011 /-203	Repair/Certify	RTA-848
622-9303-004	/-204	Repair/Certify	RTA-848
822-0393-001		Repair/Certify	VIR-433
822-0400-001		Repair/Certify	VIR-33
822-1050-004		Repair/Certify	RTA-800
822-1113-001	/-021 /-023	Repair/Certify	VHF-22C
822-1114-001	/-021 /-023	Repair/Certify	VHF-22D
822-1115-001	/-021	Repair/Certify	VHF-422C
822-1116-001	/-021 /-023	Repair/Certify	VHF-422D



## CAPABILITIES

### ACCESSORY CAPABILITIES

<u>PART NUMBER</u>	<u>CAPABILITY</u>	<u>MODEL</u>
200-94976-101	Repair/Certify	510708
601R51086-27	Repair/Certify	51086
601R51140-1	Repair/Certify	51140
601R51162-27	Repair/Certify	51162
601R51203-33     /-47/-955	Repair/Certify	51203
601R51204-9	Repair/Certify	51204
601R51226-23	Repair/Certify	51226
601R51518-5     /-7	Repair/Certify	51518
601R51594-1     /-9	Repair/Certify	51594
601R51706-3	Repair/Certify	51706
601R51313-X	Repair/Certify	51313
622-9968-001     /002/-101	Repair/Certify	SVL-4000
628-5239-001	Repair/Certify	HVPS, 15kV
634-4069-001	Repair/Certify	HVPS, 15kV
653-1597-001	Repair/Certify	C82933-M1
653-3853-002	Repair/Certify	PK266-01A
785806-2	Repair/Certify	ADSHC
827-1170-001	Repair/Certify	HVPS, 18kV
827-1737-001	Repair/Certify	HVPS, 15kV
827-3694-001	Repair/Certify	CRT, 12A85
827-4032-001	Repair/Certify	HVPS, 22kV
827-6410-001     /-003	Repair/Certify	Front End, ADC
836-7086-002     /-102	Repair/Certify	Keyboard, CDU
CC670-51052	Repair/Certify	51052